USER MANUAL

T9005

Content

1 Foreword 4
1.1 Acknowledgements 4
1.2 Announcements 4
1.3 Safety Tips 4
1.4 Acronym/terms 5
2 Brief Description of Series of Products 6
2.1 Overall Drawing 6
2.2 Accessories Introduction 7
2.3 Use and preparation 7
2.4 State and information 8
3 Quick start 9
3.1 Button function 9
3.2 Boot and shut down 9
3.3 Screen of opening and closing 10
3.4 The use of touch screen 10
3.5 Page interface 11
3.6 Status bar describe 12
3.7 Use touch panel 13
3.8 Equipment basic settings 13
3.9 APPS install and uninstall 20
3.10 Input text 20
4.0 Establish connections 21
4.1 USB connection 21
4.2 WIFI connection 23
4.3 3G connection 24
5 Communication 25
5.1 E-MAIL 25
6 Multimedia 27

6.1 Support the file format 27
6.2 Music 27
6.3 Camera 29
6.4 Gallery 30
7 Internet 32
7.1 Browser 32
8 Other applications 33
8.1 Alarm clock 33
8.2 Calculator 34
8.3 Explorer 34
9 Troubleshooting 36
Annex 1 Specifications 36

1 Foreword

1.1 Acknowledgements

Thank you for choosing our products. Argom Tech T9005 is a kind of mobile Internet equipment, delicate and cabinet, easy to carry. Equipped with a high resolution 800x480 capacitive 5- touch screen,T9005 supports high-definition videos, images and installation of multiple Office Micro Software, entertainment and other applications.

The dazzle cruel interface can provide you new user experience.

This manual introduces the various functions, using skills and announcements.

Please read the manual carefully before using .T9005

1.2 Announcements

Maintenances

- Please keep T9005 dry. Keep the equipment and battery charger away from water, vapor and wet hand in case of short circuit, corrosion or equipment failure.
- Keep the equipment, battery and charger away from strongly impact or vibration in case of equipment/battery/charger fault, fire or explosion.
- Keep the equipment, battery and charger away from very high/low temperature region in case of equipment/battery/charger fault, fire or explosion.
- Do not hit, throw or puncture T9005, and avoid dropping, extruding and bending.
- Keep the equipment and accessories authorized，otherwise the equipment and accessories would not be under our company warranty scope.

1.3 Safety Tips

Before you use the T9005, please read this section of information and keep your child aware of this information. For detailed information, please refer to the safety guidelines.

- Do not use T9005 during driving for safety.

- In medical sites, please follow the relevant regulations by turning off your T9005 when you are in medical sites.
- Please turn off your T9005 or turn on planes mode when you are boarding, to avoid wireless signals jamming aircraft control signal.
- Please turn off your T9005 near the use of high precision electronic equipment, otherwise it may lead to electronic equipment disability.
- Do not take apart your T9005 or accessories without authorizing. Only authorized institutions can repair this T9005.
- Please keep T9005 away from magnetic equipment. The radiation of T9005 will erase the information of the magnetic storage device.
- Please don't use T9005 under high temperature or in flammable areas (example: gas station).
- Please keep your T9005 and accessories away from children without supervising.
- Please obey the relevant laws and regulations when you use your T9002, and respect others lawful rights and privacy.
- Please obey the relevant specification of this manual when you use USB cable. Otherwise it may damage your T9005 or personal computer.
- Please don't use your T9005 in the damp environment such as bathroom etc. keep your T9005 from being soaked or flushed by the liquid.
- Please choose the appropriate volume, use headphones should not be too big voice, if feel tinnitus, lower the volume or stop using it.

1.4 Acronym/terms

Acronym/terms	Full name	Instruction
T9005	Argom Tech Tablet T9005	Mobile Internet terminals
WIFI	Wireless Fidelity	Based on the IEEE 802.11B standard wireless LAN
TF	Trans Flash	Also call ： Micro SD

2 Brief Description of T9005 Series of Products

2.1 T9005 Overall Drawing

2.2 T9005 Accessories Introduction

Packing List

Your T9005 packing box includes the following items

- T9005 complete device
- Power adapter
- USB cable
- Ear piece
- User manual

2.3 T9005 Use and preparation

Battery Management and charging

Before using T9005, please charge up the battery.

1. Use the AC adapter to charge up your T9005 battery.
   This tablet adopt built-in lithium polymer battery, must be choose standard adaptor for charging.
   (Input: AC110~240V 50/60Hz 0.4A; Output: DC5.0V/2.0A).

2. The first two times charging please keep about 6 hours, after that please charge for 4 hours at least.

Please charge in the following conditions:

A: The battery icons shows have no power.

B: The system automatically shut down, shut down after boot soon.

C: Press operation buttons have no response.

D: The top right corner of the device shows red icons.

【Remark】:

1. If you haven't use this tablet for a long time, in order to avoid power consumption caused damage, please charge/play the battery once a month.
2. After low battery shut down, connect DC adaptor, device will remind low battery, charging, need to wait some time until the battery is enough power to enter into main menu.
3. Device charging should be in standby status for each normal charging time. With device and screen consumption, it may cause longer charging time.

2.4 T9005 State and information

Notice Icon

Please click column frame and slide to right on the screen to unlock notice icon. Click the requisite view options and check the detailed information. Later you can click the information box and slide to shut up the information windows. The icon illustration for status bar is as follows:

	New instant messaging		No SD card
	New email		Uploading/downloading
	Matters to be handled		Download is completed
	Use USB line to connect computer with T9002		General notice (such as: synchronization error)
	Music playing		Flight mode
	Data synchronization		Charging
	Insufficient SD card space		More
	WIFI service already connected network		Battery charging sign

	unavailable		

Notice panel

Notice icon implies new messages, the settled alarm clock, schedule, and SD card inserting etc. You can open the information panel to check specific information.

Open notice panel

When new notice icons appear in notice bar, please hold notice bar and slide down to open notice panel.

3 Quick start

3.1 Button function

Key functions illustration:

Power key	● Long press for 3 seconds this button for booting ● In booting condition, long press this button pop-up shutdown options. ● In booting condition, press this button to turn off the screen
Power key to reset	● When the tablet is frozen, long press for 7 seconds power button, tablet will force to shut down. ● Suggest don't use the power button unless tablet unable to shut down normally. Otherwise, it will easy to damage the tablet system.
Home key	● Press this button to return to the function interface from arbitrary interface. ● Long press this button to open the window of applications operated recently.

3.2 Boot and shut down

Boot

After long pressing for 3 seconds on the power button, you can see the boot logo.

The system access into screen locking status after opening, please press the Power On/Off button to refresh, and slide up the unlock icon on the screen.

Power off

1. Long press the **power On/Off** button, then "Power off" options pop up.
2. There is silent mode in device options, **Power off** and **Cancel**.
3. Click **Power off.**

3.3 Screen of opening and closing

It will be closed during the screen idling.

- After idling period of time, screen will be automatically closed to save the battery.
- When the screen is on, you can press the power button to shut down the screen immediately.

Tip: if you need to find out how to set the **screen timeout** please refer to chapter 3.8.1.

Opening in screen closed condition.

When the screen is off, you can long press **Power On/Off** button to activate it. Enter locked condition after opening it, press "lock "icon and slide up for unlocking, and holding up “voice ” icon and slide down for mute condition.

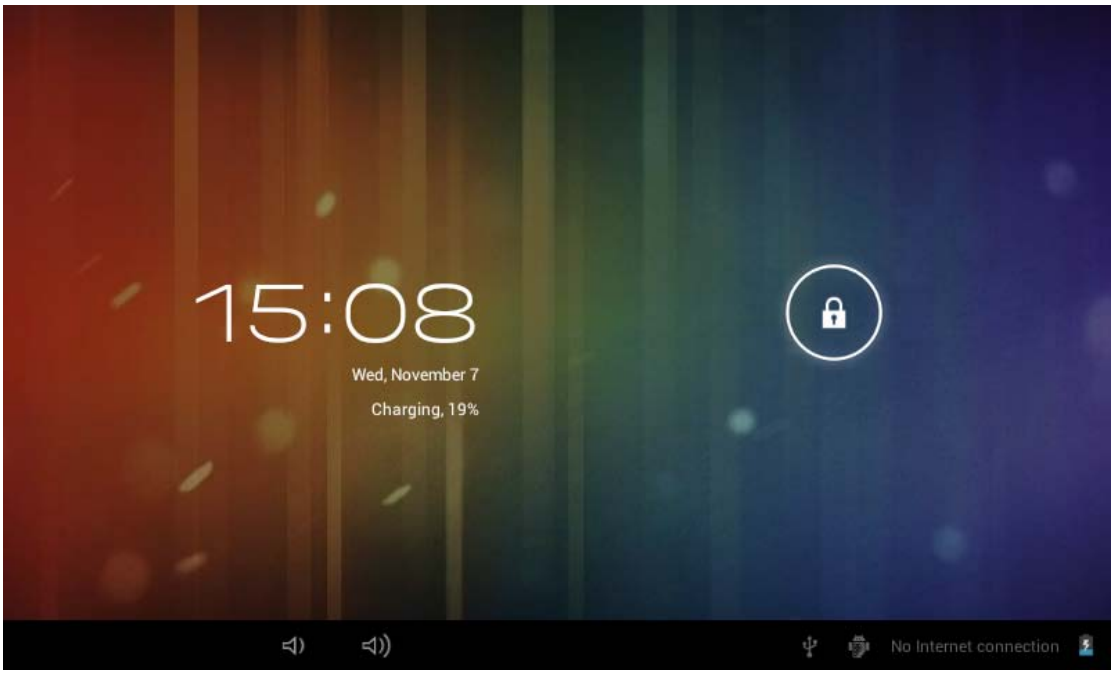

3.4 The use of touch screen

T9005 operation mode

There are several ways you can browse screen, menu and application, etc on the T9005.

Click

When you want to use the screen keyboard for input, you can choose applications on the homepage as long as you click a project with finger.

Press

If you want to open an available option (such as the text box or web link) or

move shortcut and main program menu on the homepage as long as you press the items.

Fast sliding or sliding

Fast sliding or sliding said in his fingers making rapid vertical or horizontal drag action.

Drag

Before you start to drag, you must use your finger to press strongly on it for a short time. When dragging it to the position you want, you can loosen your finger.

Rotating

For most pictures, you can only turn to T9005 then screen will translate from lateral direction to straight. Such as in the input text, watch movies, etc.

3.5 Page interface

The main menu screen shows all the applications. You can use the application, set shortcuts and customize your homepage interface wallpaper, etc.

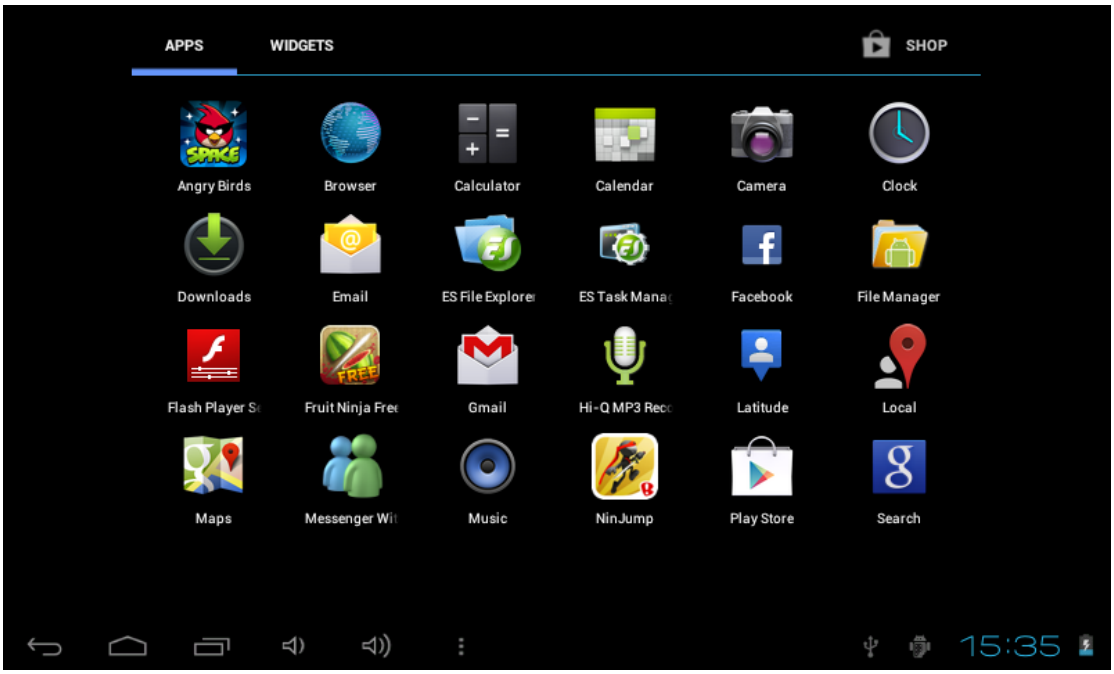

In the main interface, you can management main interface software ICONS: long press the icons for 3 seconds, after the icons become bigger, then you can drag anywhere in the interface and loosen your finger.

Delete icons: long press the icons for 3 seconds, drag the icons to the top of tabl et PC while the icon turns red, loosen your hand, after that you can delete icon.

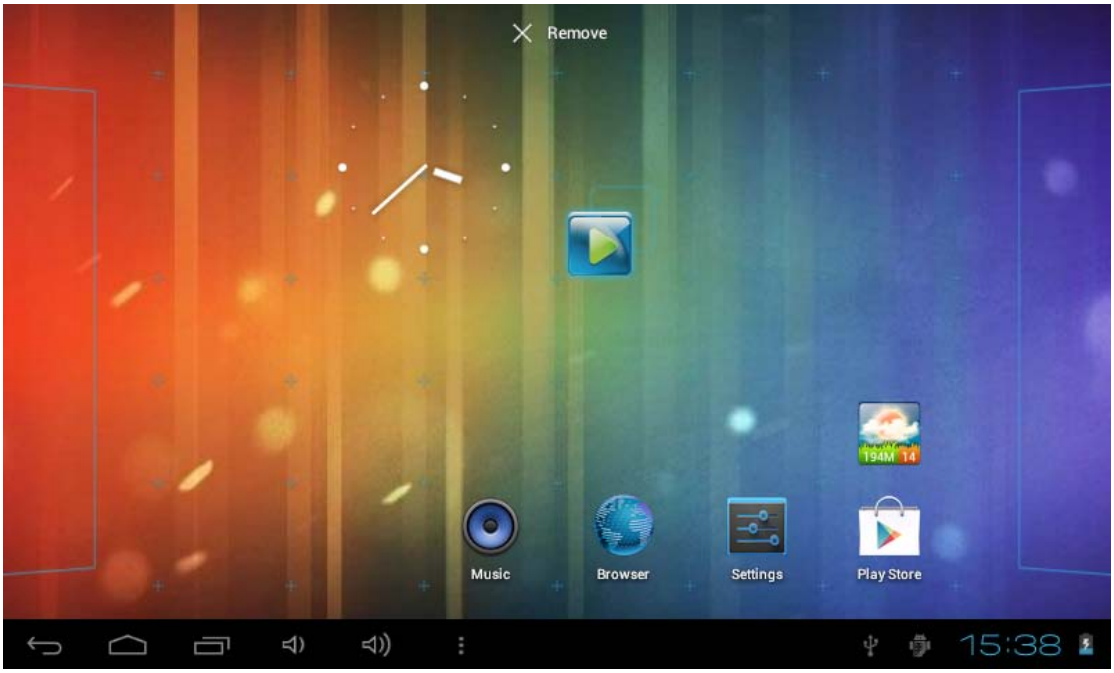

3.6 Status bar describe

The status bar is on the bottom of the screen.
In the lower left corner, display main interface software, ESC, home page, files running in the background, reduce volume, increase volume, menu.

In the lower right corner, display USB connected, USB debugging connected, Insufficient SD card space, current time, Wi-Fi signal strength and battery charging sign etc.

3.7 Use touch panel

Device equipped with a 7 inch touch screen. Following the main touch screen area is described and describes some of the tips for how to use the touch screen.

No matter which interface you are on the screen, can go back to home page through pressing the soft key on the bottom icons.

【Attention】In different applications, by tapping the back soft key in the lower left corner on the touch screen, you can return to its interface on the up floor.

In different applications, by tapping the menu key in the lower left corner of touch screen, the screen will appear Wallpaper, Manage apps and System settings as follows.

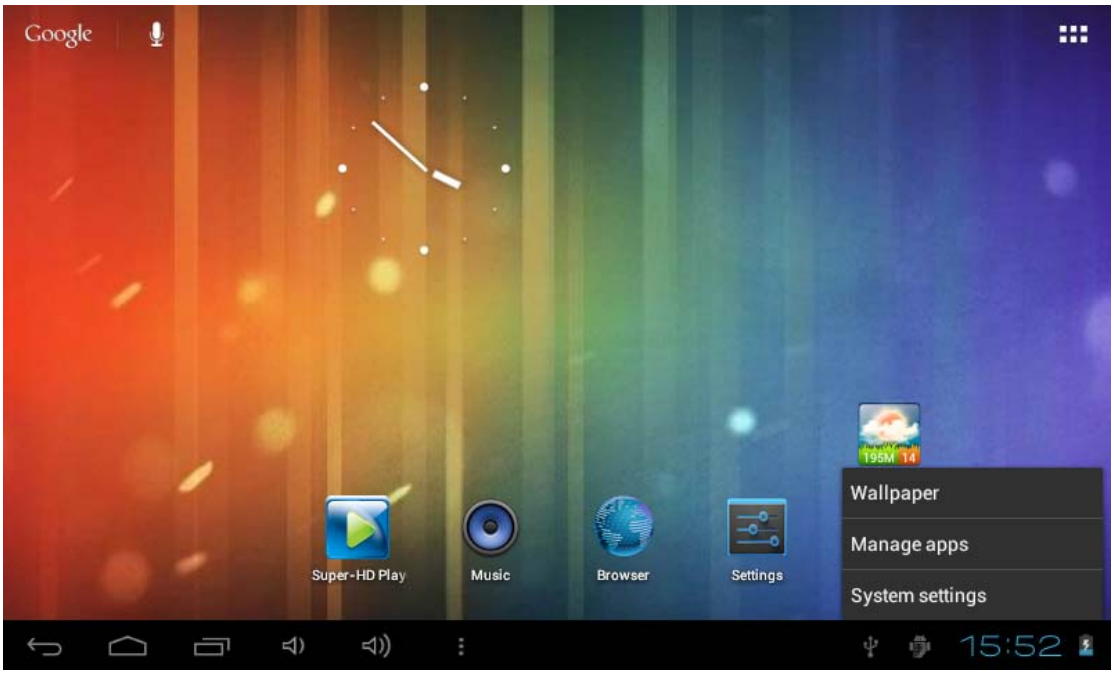

3.8 Equipment basic settings

Settings: Click settings icons, enter settings interface.

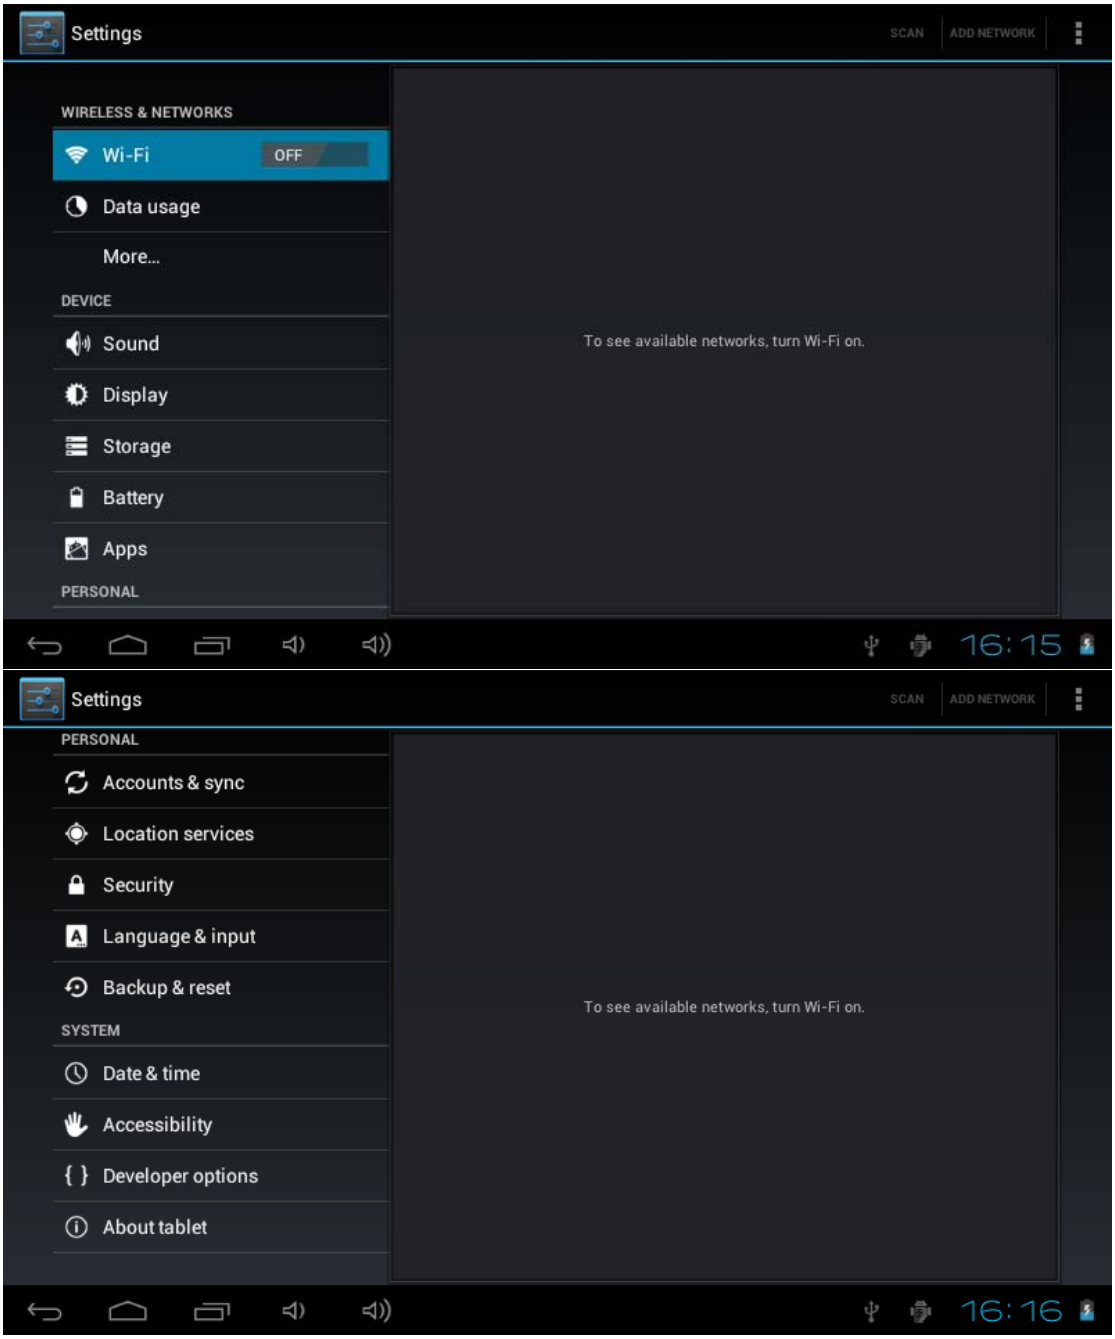

3.8.1 Silent mode, volume, notification, ringtone, audible selection, screen lock sounds.

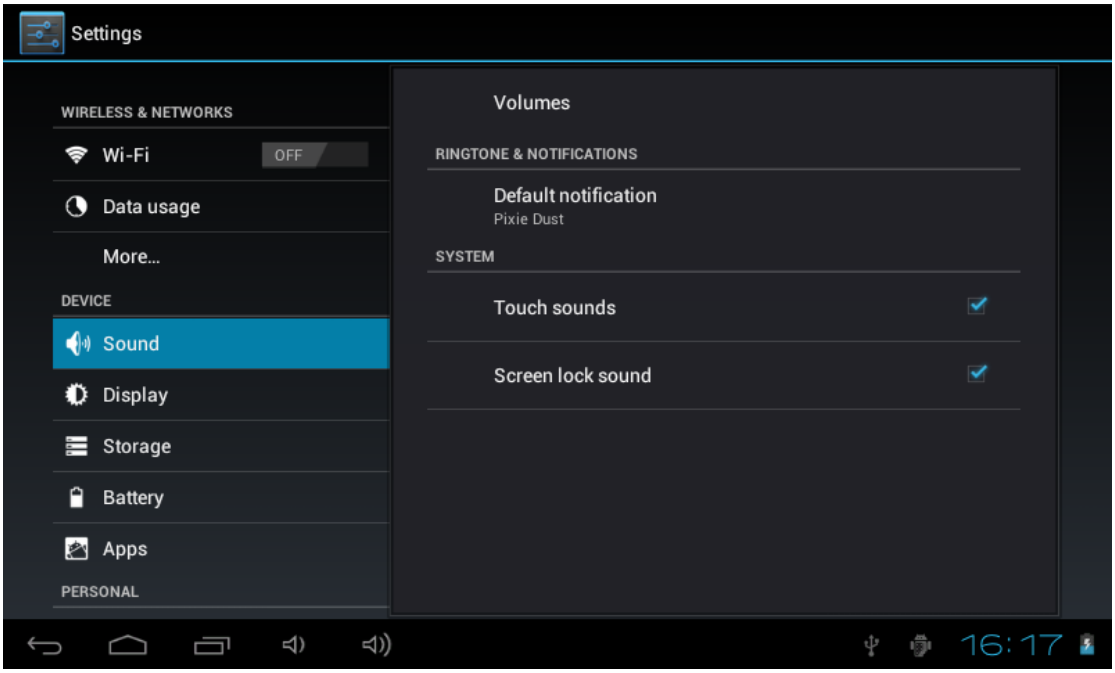

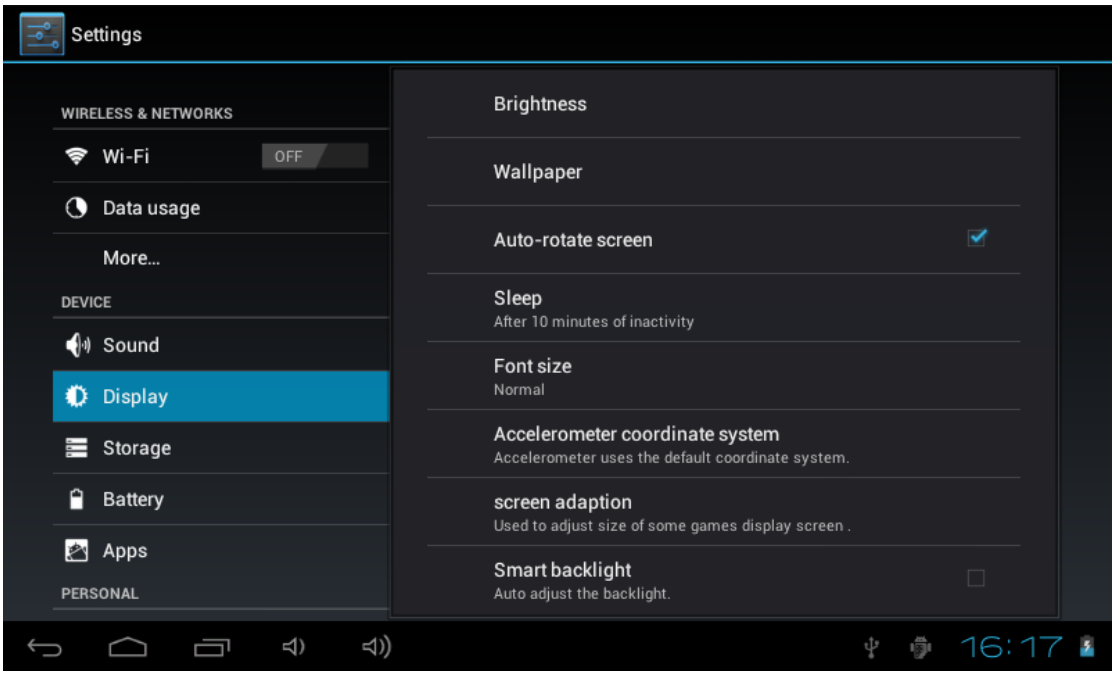

3.8.2 Application

Manage applications

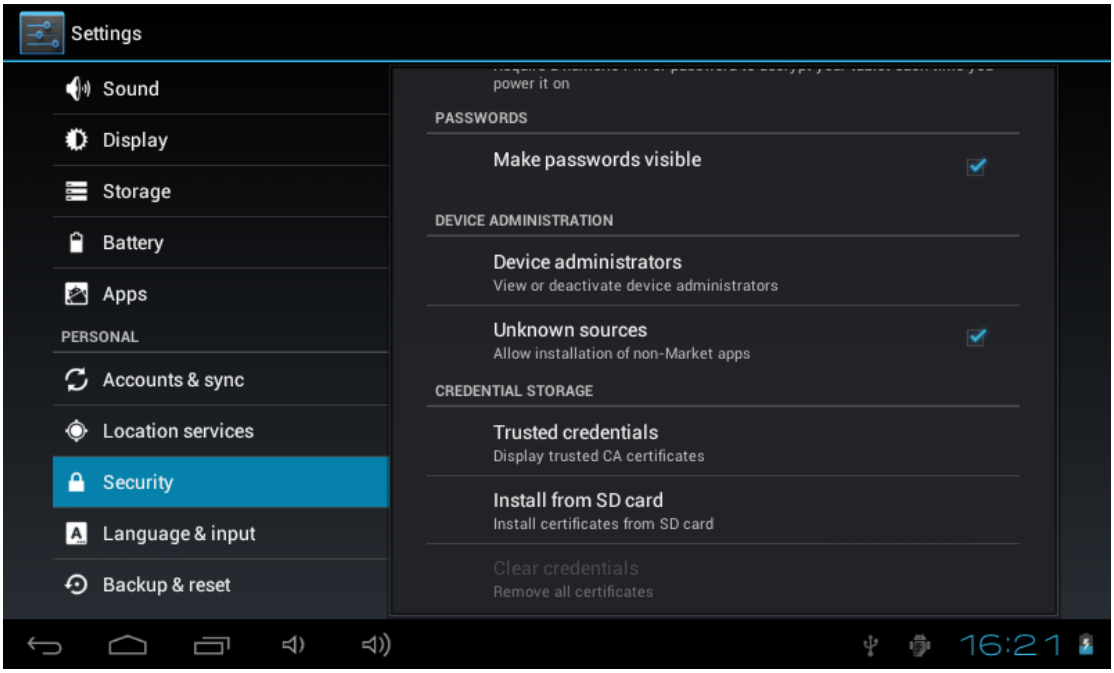

Unknown sources: Click “Unknown Sources”, then click “OK”.

Manage application: manager and uninstall application.

【Remark】: When you firmware upgrade, please close the USB connect.

How to uninstall?

1. Enter

“Settings”>”Application”>”Manage application” and then there will be installed the program list.

2. Click you want to uninstall icon, will enter the following interface.

3. Click Uninstall, then you can delete the application.

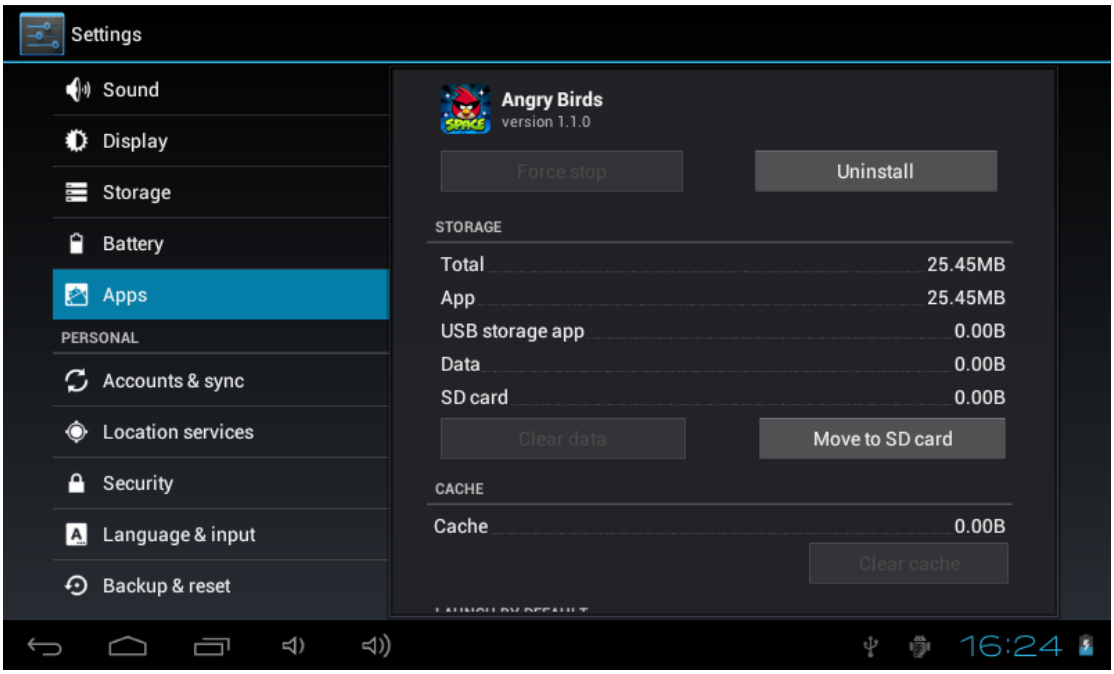

3.8.3 Privacy

Restore to factory settings

When there are great errors in your T9005 or you forget the passwords, you can use **Restore to factory Settings** to restore them to Initial State.

Methods:

1. On the homepage interface, press **Menu** key.
2. Click **Settings.**
3. Click **Backup & reset.**
4. Click **Factory data reset.**
5. Wait for the system to restart.

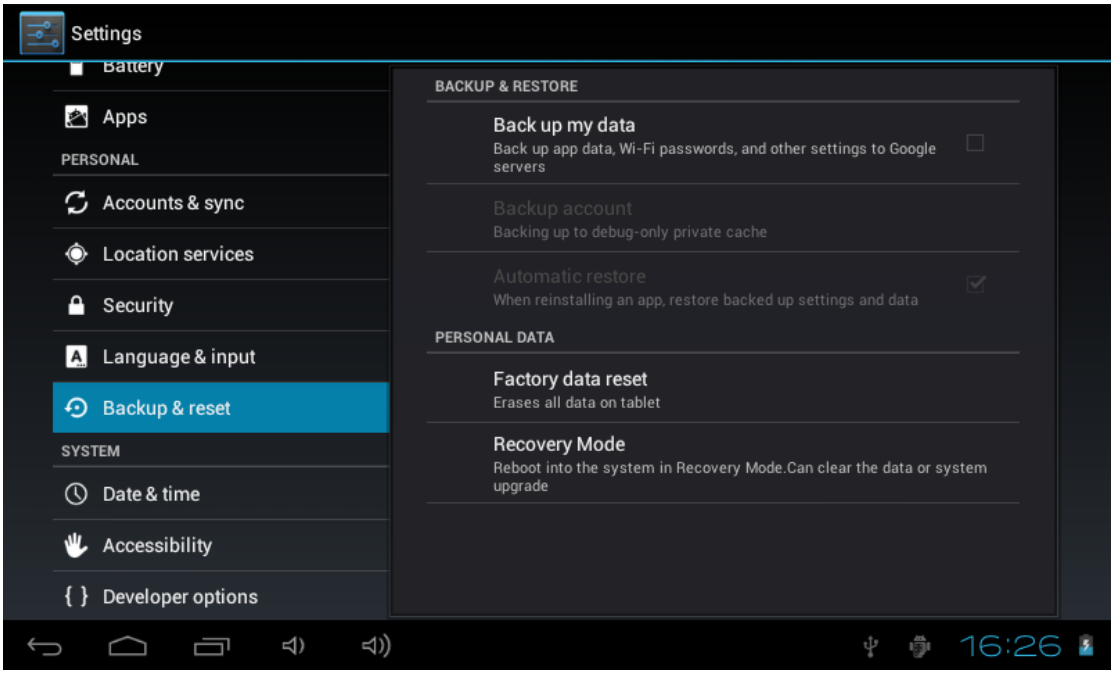

3.8.4 Storage

Remove TF card, view of the available storage space.

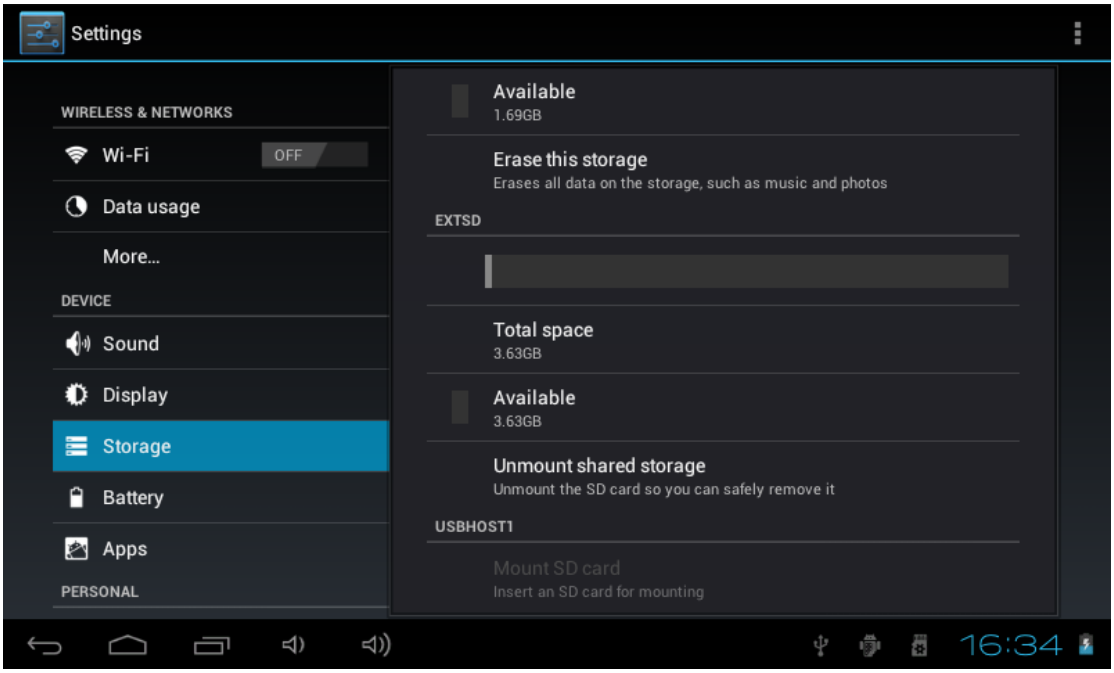

【Remark】: Please hit “Unmount shared storage”, so that you can remove SD card safely.

3.8.5 Language & Keyboard

Settings: Language, text input and automatic error correction options.

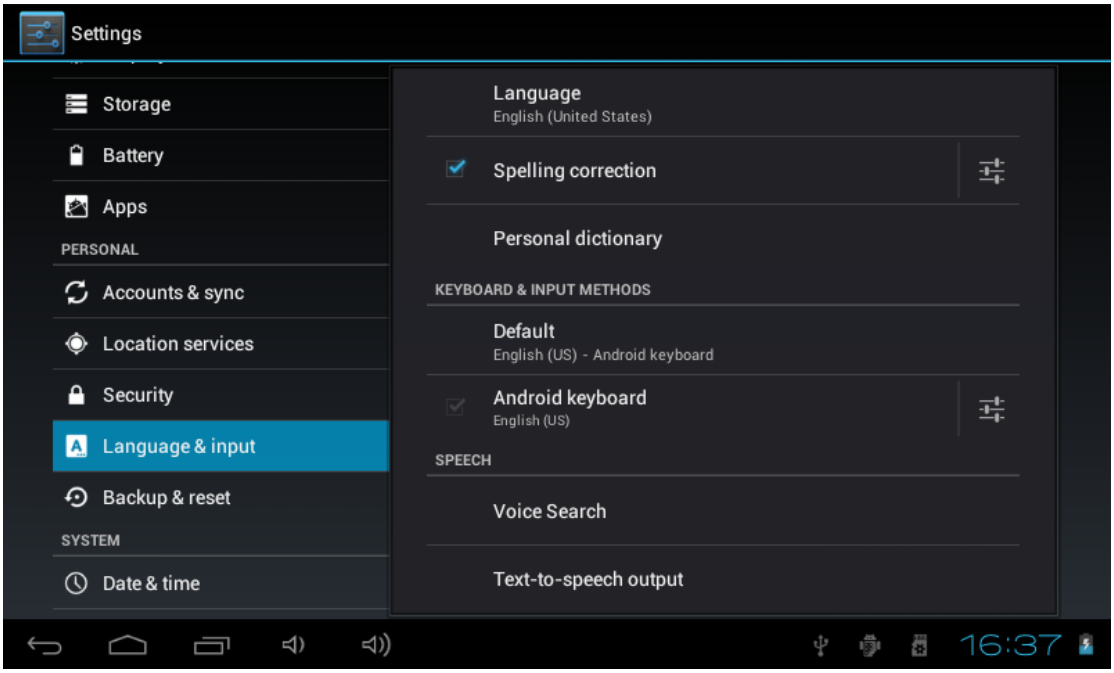

Select Language: 60 kinds of national languages are available.

Android keyboard: Android keyboard setting

Sound on Key-press

Auto-capitalization

Show suggestions: Display suggested words while typing.

Auto-complete: Spec bar and punctuation automatically insert highlighted word.

3.8.6 Date & time setting

Set date, set time, select time zone and select date format.

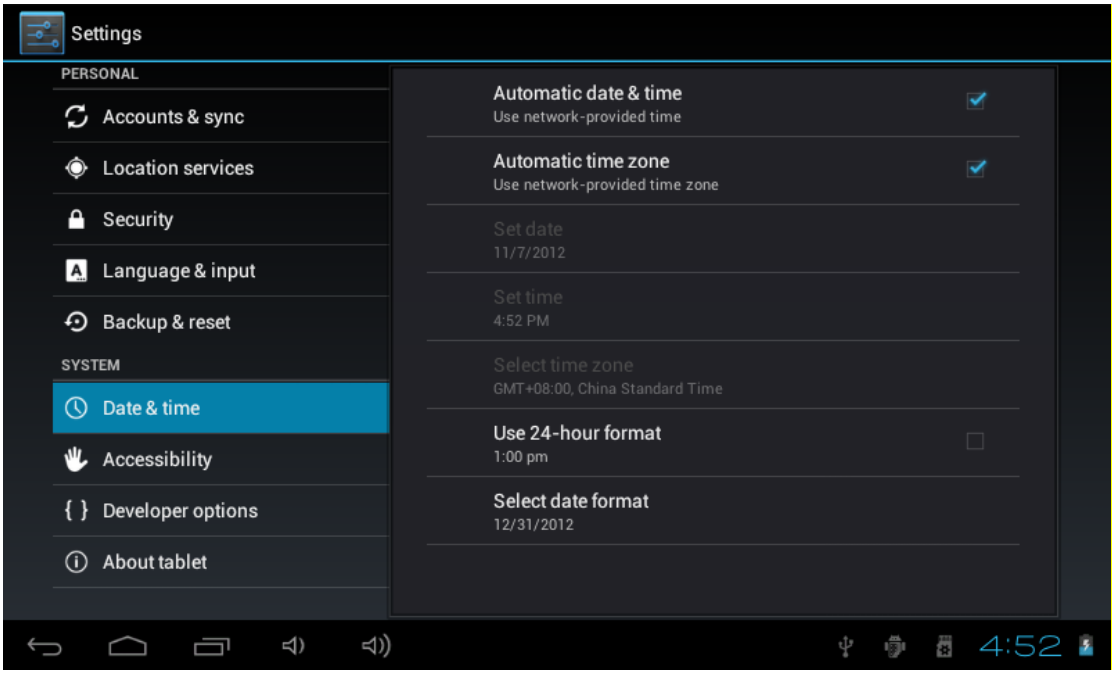

3.8.7 About device

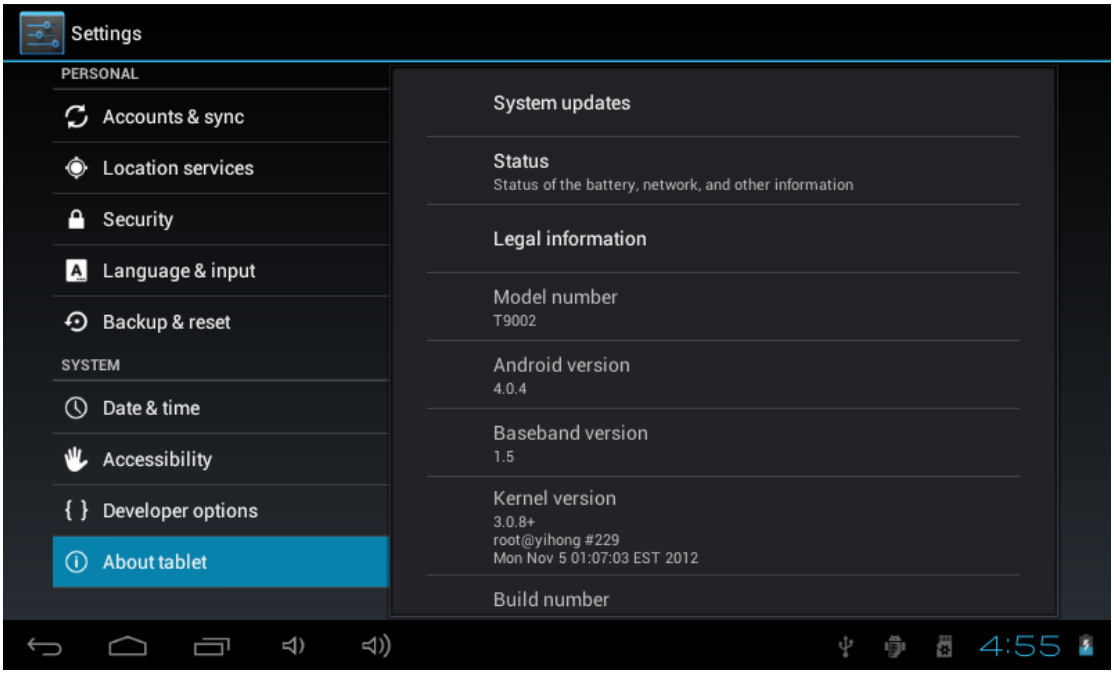

3.9 APPS install and uninstall

3.9.1 APPS install

This Tablet can support Android APPS in market by third party, most APPS can install in network, can copy to NAND FLASH or SD card.

Click ES File Explorer

icon. It's available for internal memory disk and SD card disk. Select the APPS you would like to install, click APPS icon and select "OK", go back to main menu, it will display the installed app you just selected.

Remark: Some 3rd APP must install properly by memory card, downloaded 3rd party app may not install properly on device.

3.9.2 APPS uninstall

Click Settings, choose Apps, select the Apps you would like to uninstall then click "uninstall" ----→click "OK" as follows:

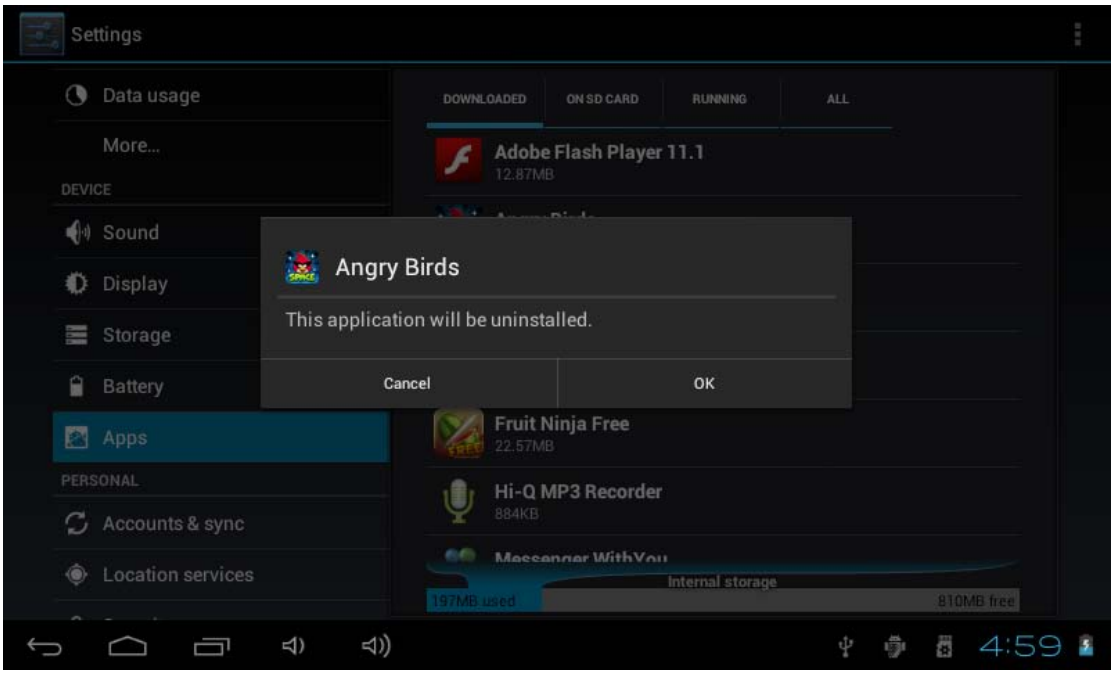

3.10 Input text

Use the screen keyboard

When you start programs or select text edit box which needs to input text or number, the screen keyboard will appear.

There is an optional input method of keyboard below:

1. Android keyboard

2. The third party input method（The user can install any input methods independently）

Select the input method which you want to use.

For pre-installation, Android keyboard will be displayed when you want to input word.

1. On the homepage interface, press menu button and click "**Settings**".
2. Click the **Language& input**.
3. List all installed input methods of T9005 in the text setup area.
4. Tick the input method you want.

Use and switch input method

1. On the text input interface, hold text edit box area until "edit text menu" pop ups. Then click the input method.
2. Select the input method you want.

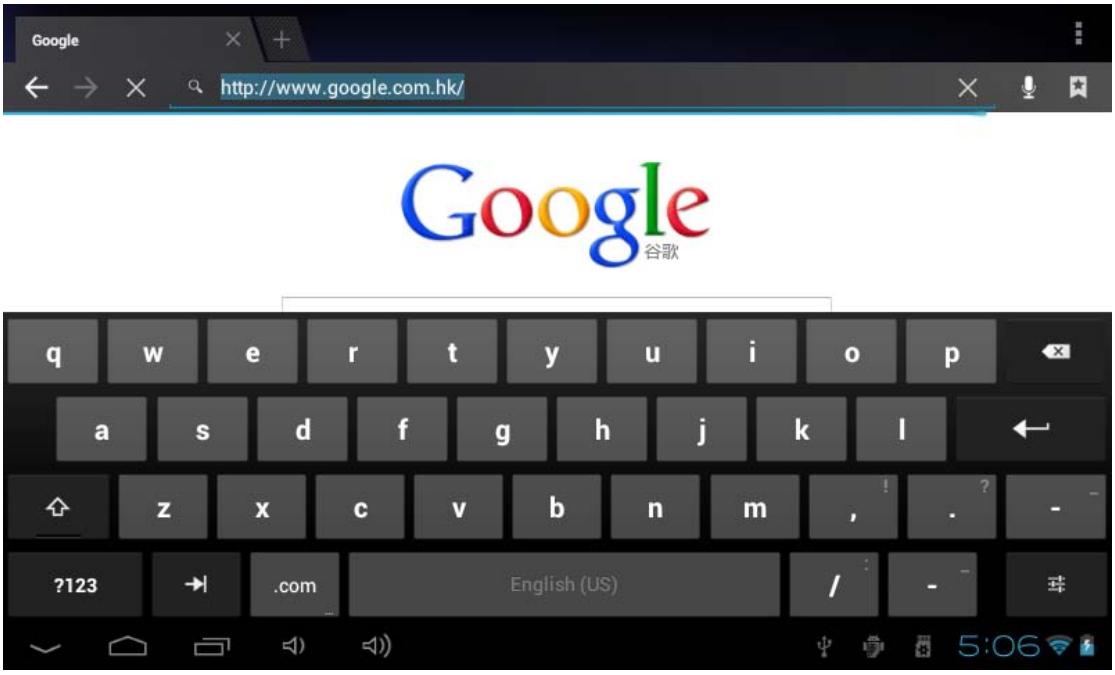

4.0 Establish connections

4.1 USB connection

1. Use USB cable to connect T9005 with computer. Notice massage will appear in Notice bar.
2. Drag up the icon in the lower left corner.

3. In the notification panel, click on the **USB connected**, then click **Turn on USB storage**.
4. Then the USB connection will be done successfully.

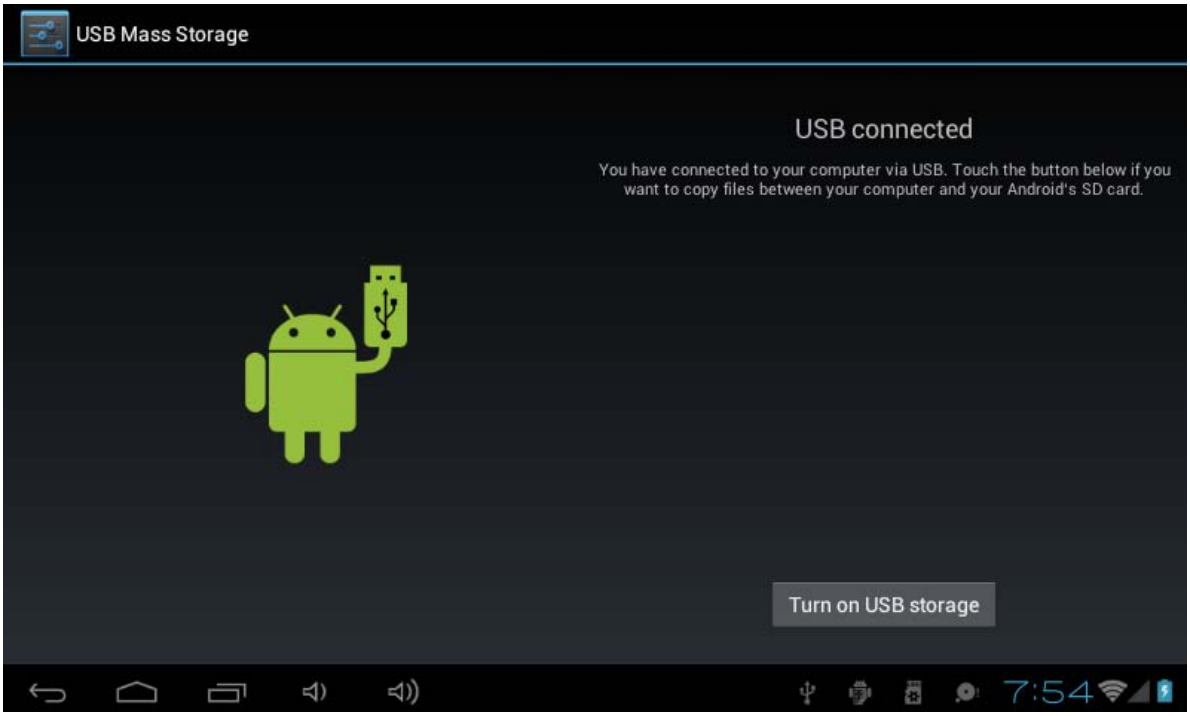
USB Mass Storage
USB connected
You have connected to your computer via USB. Touch the button below if you want to copy files between your computer and your Android's SD card.
Turn on USB storage
7:54

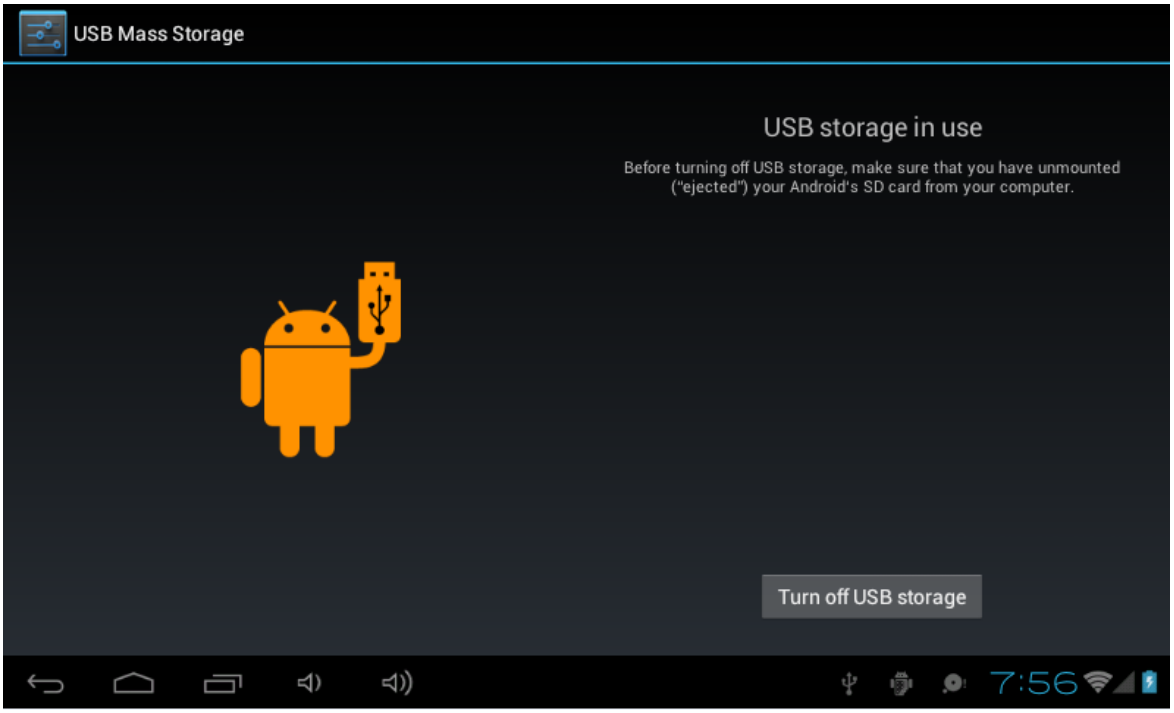
USB Mass Storage
USB storage in use
Before turning off USB storage, make sure that you have unmounted ("ejected") your Android's SD card from your computer.
Turn off USB storage
7:56

4.1.1 Copy files to memory cards.

1. Use a USB cable to connect T9005 with computer.

2. After setting the **store setting**, connect T9005 with computer successfully.
3. Open **My Computer** of your computer, "portable disk (x)" can be seen.
4. Select the intended files and copy to the "portable disk (x)".
5. After copying the files, click "**safe deletion hardware**" icon of your computer task bar to unload.

4.1.2 Content of T9005 Storage Device

1. **NAND FLASH** storage device, T9005 itself has 8G storage space for keeping files.
2. TF removable storage card.
3. The above mentioned two storage devices can connect your computer by using USB.

Note: When you connect the USB cable with T9005, enabling the **USB storage device,** you will not get access to Internal Memory; If you want to get access to Internal Memory, please disconnect the USB device.

4.1.3 Storage card

Copy files to storage card

You can transfer files between T9005 and computer such as music and pictures, etc. If you want to check the files, please click the file browser, then you can browse the contents of the SD card.

Delete the files on the T9005 memory card.

1. Select the file you want to delete.
2. Click the file you need to delete, then the file menu will popup.
3. Click "**delete**"

4.2 WIFI connection

You can connect T9005 to Wi-Fi network:

1. In the homepage interface, click the **MENU** button, then settings menu will pop up.
2. Click **settings**.
3. Click **wireless and network**.
4. Drag **Wi-Fi** to “ON”. T9005 will automatically scan available Wi-Fi networks.
5. Choose the Wi-Fi network you prefer. If it is private Wi-Fi network, then the password having been set should be input.

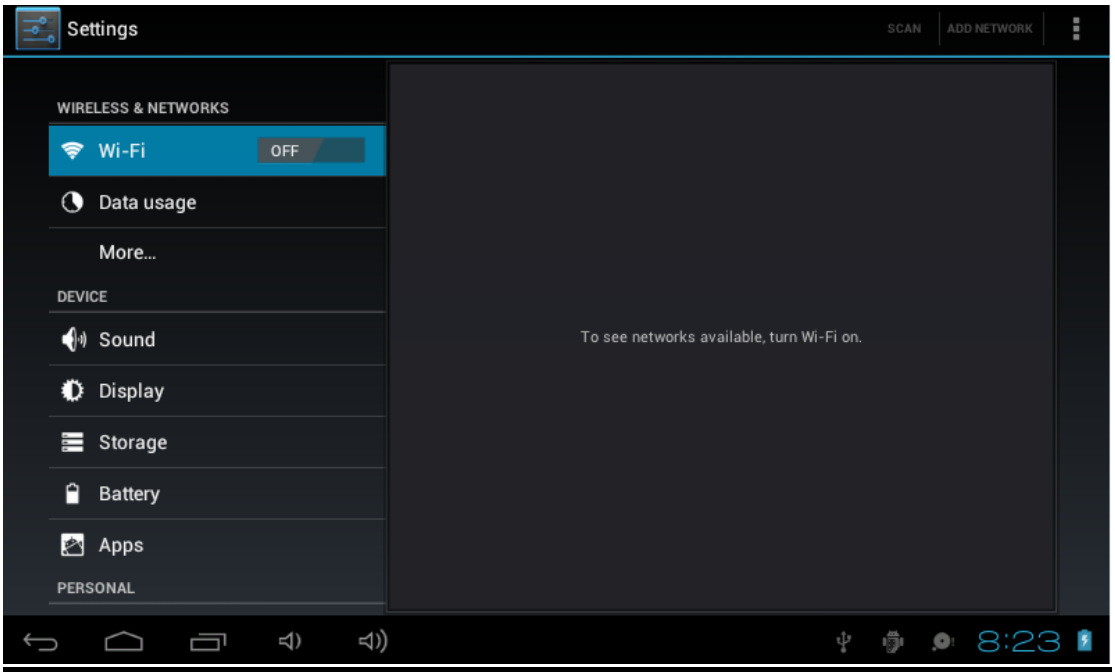

4.3 3G connection

You can connect T9005 to network via 3G USB Dongle:

Insert a 3G USB Dongle.

5 Communication

5.1 E-MAIL

E-mail Settings

E-mail applications accompany with email settings guide, it can add the common Web email service providers (e.g. Gmail, Yahoo, Hotmail and 163 etc) except for POP3 or IMAP email account.

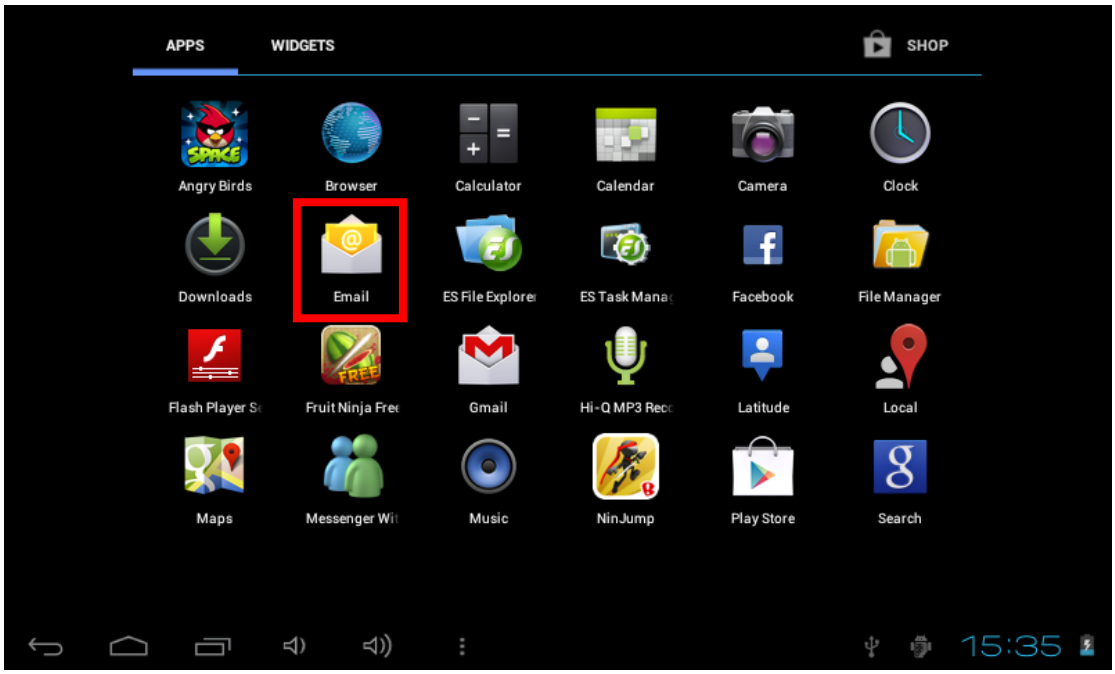

Note: Before setting the email, please ensure that the network has been linked.

Mailbox setting guide

1. Click the **E-mail** icon, then the mailbox setup guide will appear.
2. Click the **next step** button.
3. Sign in your email account and password**.**
4. Click the **next step** button, and select your mailbox type: POP3 or IMAP.
5. Click **next step** button to check whether email server is available.
6. Input your account and click **completion**.
7. If the mail account is available, it will automatically enter your inbox.

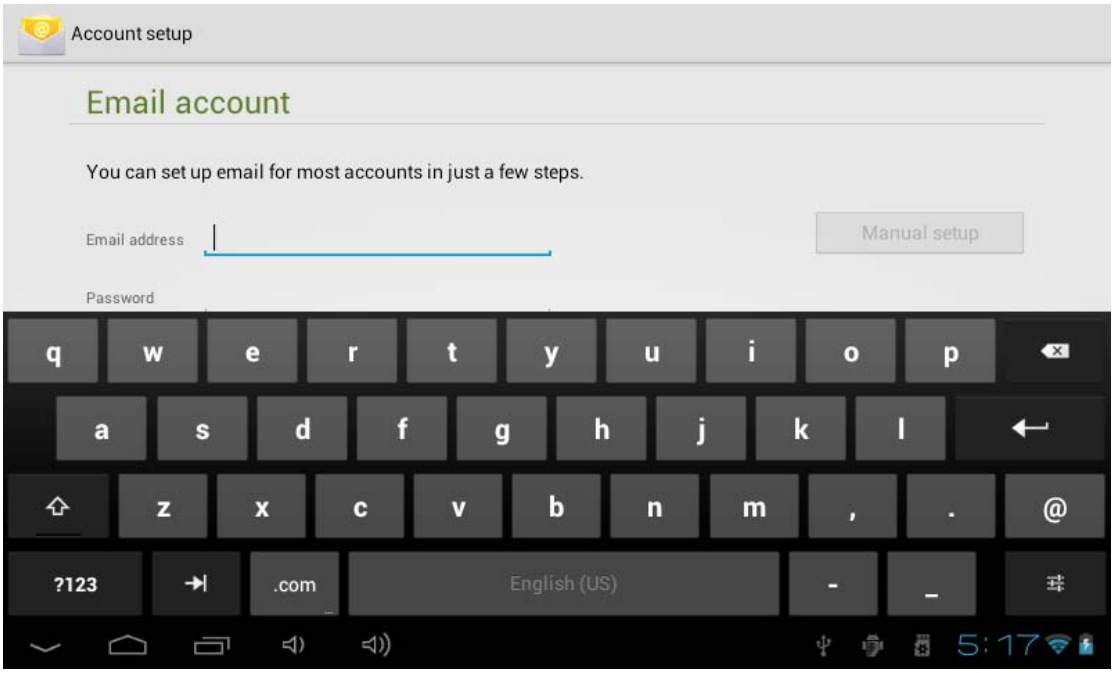

Delete email accounts

You can delete the POP3 or IMAP email account having been set in your mobile phone

1. Click **E-mail**
2. Enter to your E-mail box
3. Press Menu key
4. Click **accounts**
5. Hold the mail account you want to delete.
6. Menu list popping up, then click “**Remove account**”
7. Click "**OK**" to remove it.

Send E-mail messages

1. Click **E-mail** and get access to your inbox.
2. Click the inbox to enter in. With emails being refreshed automatically, emails can be read from time to time.
3. Press the Menu button, menu interface will pop up.
4. Click "**compose**" to write a new mail.
5. Input the recipient in the recipient column.
6. Input the theme of your e-mail and the content of your e-mail.
7. If you want to add attachments, press the menu button, then the menu options will pop up.
8. Click "**add attachment**"
9. Select attachments you want to send (e.g. video, images, etc.)
10. Click "**Send**" to send the e-mail.

Note: If you have more than one account, click that account title before you click the main **menu** key to write an e-mail.

6 Multimedia

6.1 Support the file format

Your T9005 supports the following formats.

Music file format

- MP3
- AAC(AAC, AAC+ and AAC-LC)
- OGG
- WMA
- WAV
- FLAC

Video format

- AVI(H.264)
- RMVB
- MKV
- WMV
- MEPG4
- MOV
- VOB
- FLV
- 3GP

6.2 Music

There are four default categories in music player: artist, album, songs and playlist and now playing. Choose a category to check list contents. If you enter a category, always choose until you have to play songs. For example, if you choose the artist category, you will see a list of artist names arranging in alphabetical order from A to Z. If you choose an artist, the list will be presented with a list of the artist album songs.

Visit and broadcast music

1. Click **music**.
2. Click **songs**, also can click **artist, album** or **song list**.
3. Choose one song to play.

Add songs to the new playlist

1. Click **music**.
2. Click **songs**.
3. Hold the song you want to add to the playlist.
4. With music setting menu being pop up, click **add to play lists**.
5. Click **New**.
6. Input a name for the playlist.
7. Click **Save**.

Delete songs in the playlist

1. Click **music**.
2. Click **songs**.
3. Hold the song which you want to delete in the playlist.
4. With music setting menu being pop up, click "**delete** ".

Visit and broadcast music

1. Click **music**.
2. Click **songs**, also can click **artist, album** or **song list**.
3. Choose one song to play.

Add songs to the new playlist

1. Click **music**.
2. Click **songs**.

3. Hold the song you want to add to the playlist.
4. With music setting menu being pop up, click **add to play lists**.
5. Click **New**.
6. Input a name for the playlist.
7. Click **Save**.

Delete songs in the playlist

1. Click **music**.
2. Click **songs**.
3. Hold the song which you want to delete in the playlist.
4. With music setting menu being pop up, click "**delete** ".

6.3 Camera

Photo taking function

1. Click **Camera.**
2. The system enters the Camera interface.
3. Click **Shoot** button to have photos taken easily.
4. Other functions like sizes, storage locations, white balance and focusing adjustment can be set as well.
5. After finishing taking a photo, there is a preview of the photo in small size.

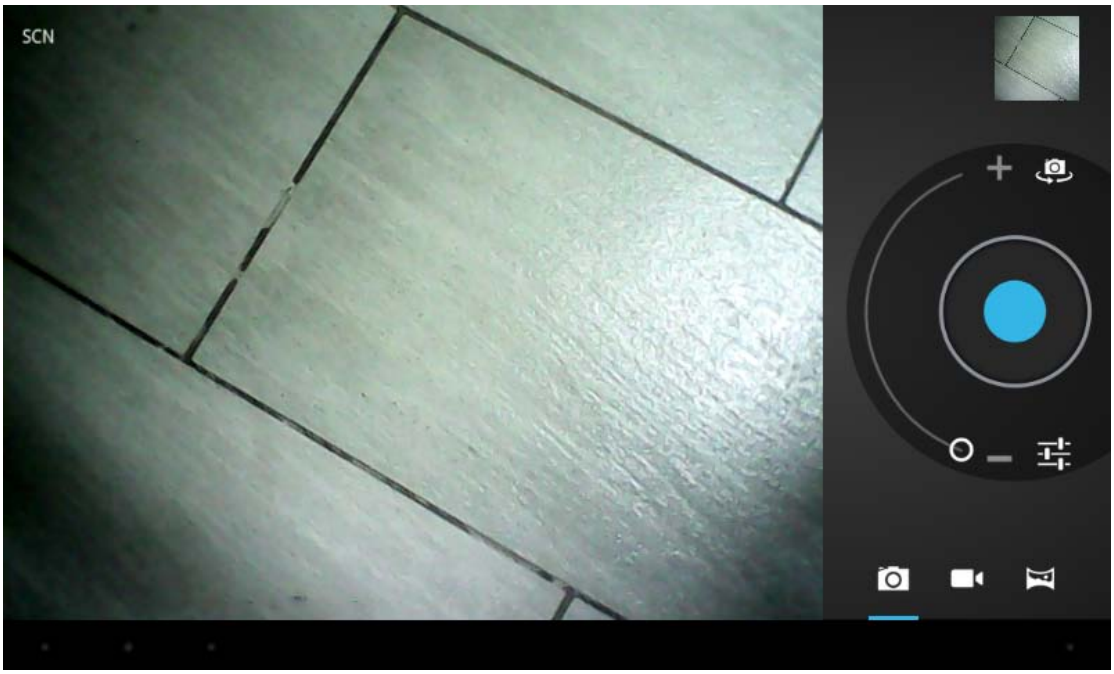

Video recording functions

1. Drag up the switchover button to switch it into the video recording mode.
2. Click the **red Video Record** button to perform video recording.

3. Other functions like color effect, white balance and video quality can also be set.
4. Click **Video Record** button again to stop video recording, with the previous video being able to be seen.

6.4 Gallery

Using the Gallery application program, you can automatically search all photos and video files in T9005 and in USB device (including TF card). Moreover, the Gallery will classify such photos and video files by these folders. You can use the Gallery program to view and edit photos, take photos as wallpapers as well as viewing videos.

Check pictures

1. Click the intended folder to check pictures included.
2. Click the intended pictures that will be played in full screen mode.
3. When touching the screen, arrows will appear on the left side and right side of the picture, with the previous/next picture being able to be seen by clicking the arrow.
4. When touching the screen, the zoom-panel will appear under the pictures; with the pictures being able to be zoomed.

Skills: Gallery supports automatically rotating function. Rotating your T9005, the picture will automatically follow the direction according to the way you rotate your T9005.

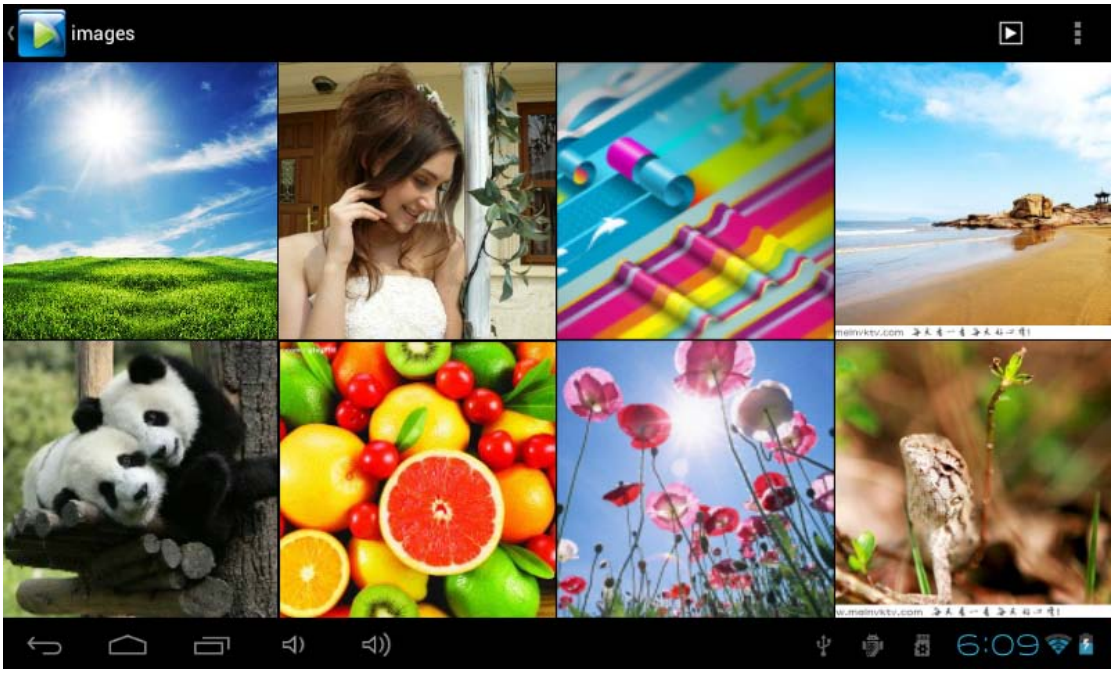

Edit and set images

Press the menu button to display images in full screen mode, you can select the intended image to edit and set the image according to your needs.

- **Slide presentation**

  Open the pictures and click **slideshow**. All the images can be shown in the slide folder for broadcasting.

- **Sharing**

  1. Press the menu button and click "**share**".
  2. The picture will be shared with your friends via **Twitter, Facebook, Messaging, Gmail or Email**.

- **Rotating**

  1. Press the menu button and click "**More**".
  2. Click **Rotate Left** or **Rotate Right**.

- **Crop**

  1. Press the menu button, click “**More**” and select "**Crop**"
  2. Click the image and drag a related region of the image you want,
  3. Adjust the size you want, click **"Save"**.
  4. If you want to quit cropping the image without saving it, click **"Discard"** and return to the Gallery.

Video preview and play

Operating the Gallery application, you can scan all video files in the T9005 and in the USB device (including TF card), as well as previewing playable video files. Click one of them to play.

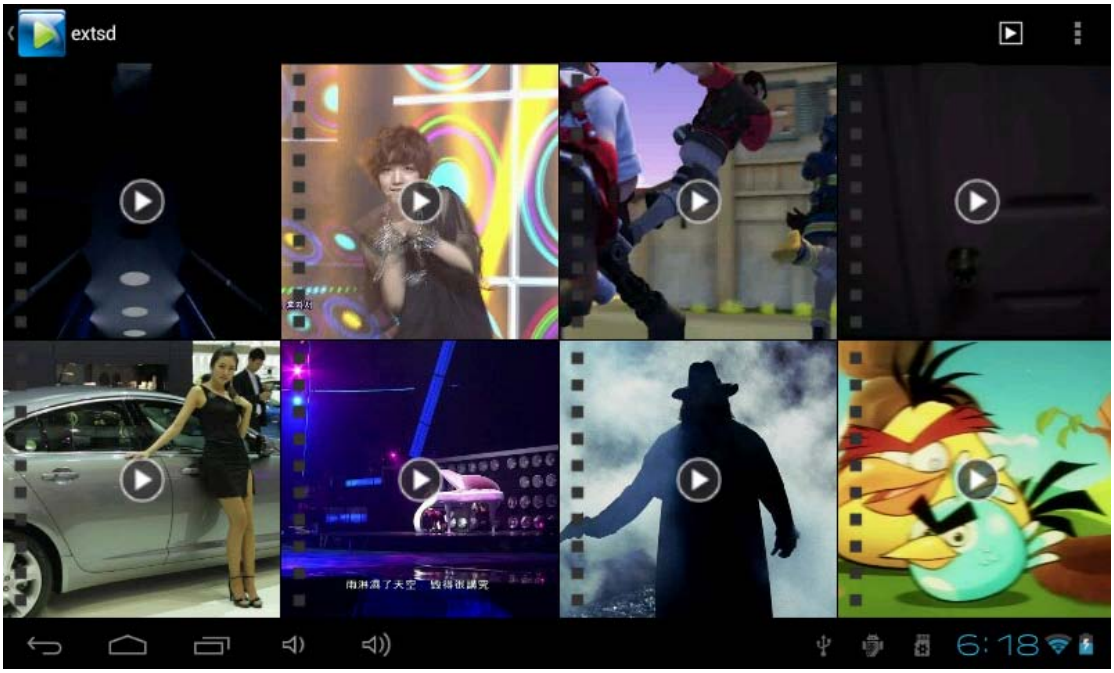

7 Internet

7.1 Browser

Enter into homepage

The browser always habitually shows the last homepage visited by user, the homepage will appear when it enters into the browser on boot.

Change your home page

1. Click **browser**.
2. Press the Menu button, menu of browser settings pops up.
3. Click **more**.
4. Click **Settings**.
5. Click **settings home page**.
6. Input website, and click "**OK**".

Browse website

You can slide the screen up and down to browse the webpage.

Enlarge or shrink pages

Opening a webpage and dragging it, the webpage enlarging and zoom-out button will appear at the bottom of the webpage. You can click "enlarge" or "reduce" to browse webpage.

Find the words in webpage

1. When browsing the web, press menu button and menu options pop up.
2. Click **more**.
3. Click a homepage you want to visit.
4. Enter your search projects.
5. When you input characters, words will change from white to green.
6. Click the arrow on search column to move on searching.

Management bookmarks

- **Settings webpage bookmarks**

  1. Go to a webpage in the browsing interface.

  2. Press the menu button and click the **bookmarks**, then click **add bookmarks**.

  3. Edit bookmarks and click **OK**.

- **Opening bookmarks**

  1. Press the menu button and click the bookmarks in the browser interface.

  2. Click the intended bookmarks to open the webpage.

- **Editing bookmarks**

  1. Press the menu button and click the bookmarks in the browser interface.

  2. Click and hold the bookmarks to open the menu options.

  3. Click the edit bookmarks to edit it, and click **Ok**.

Use the browser window

- **Open a new browser window**

  1. Open the browser window; click the menu button and click **new window**.

  2. Input the website address in the new window.

- **Switch browser window**

  1 In the browser window, press the menu button and click **windows.**

  2. Click the window you want to open.

- **Set browser**

  In the browser interface, press the menu button and click **more**, then click **Settings** to set the browser.

8 Other applications

8.1 Alarm clock

1. Click the Clock program.
2. Enter into programming interface as the picture is shown below.

3. There were pictures, music, alarm clock and page buttons.
4. Pressing the Menu button, alarm setting menu will pop up.

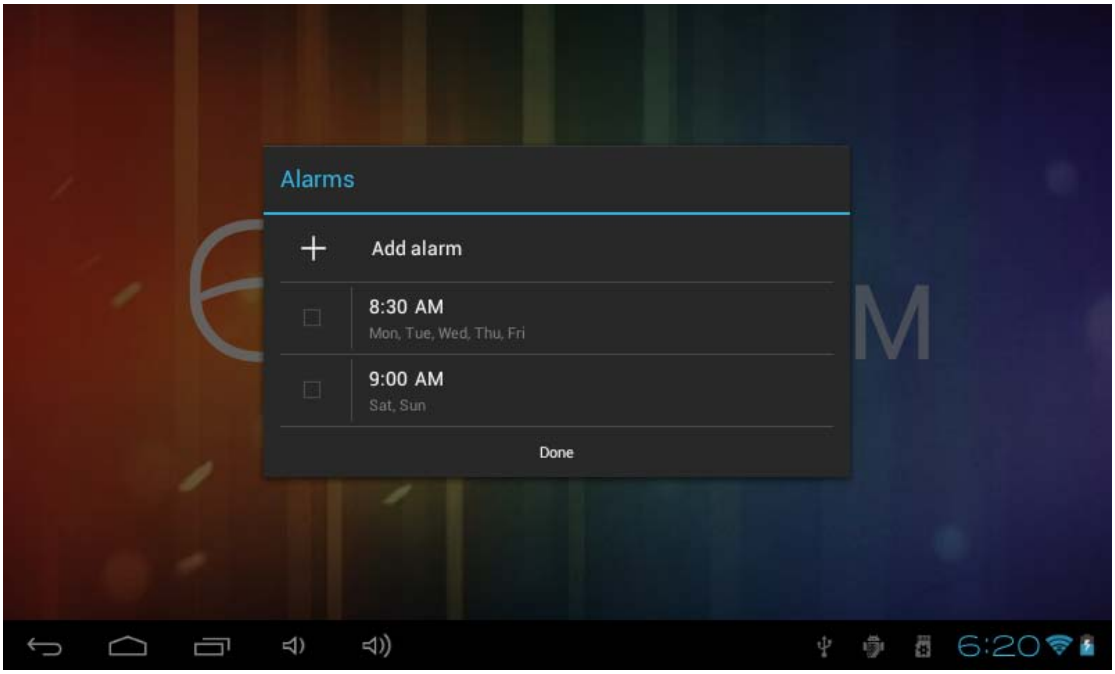

8.2 Calculator

1. Click **calculator**.
2. Enter into the basic calculator panel.
3. Press the Menu button, and click the advanced panel.
4. Touch the digital panel or operators on the counter to calculate.

Skills: You can slide the screen to change basic panel to advanced panel.

8.3 Explorer

Browse the file

Slide the screen to look for the **ES File Explorer**.

You can use the file browser to manage editing/deleting files and folders and establish file sharing and FTP servers to achieve resource sharing.

Cut and copy files

1. On the **ES File Explorer**, press operation documents.
2. Operation menu pops up, including **Copy Open As, Cut, Copy, Rename, Delete, Select All and Shortcut.**

Copy or Move the file

1. Use fingers to hold the intended file in the file browser.
2. Click **"copy" or "Move".**
3. Select the file you want to copy or Move to and click **Paste**.

Delete the file

1. Use fingers to hold the intended file in the file browser.
2. Click "**delete**".
3. Click **"delete**" to delete files or click "cancel" to return.

Quick search

1. On the file browser, press the menu button to popup menu.
2. Click "**new**".
3. Click "**search**".
4. When search panel pops up, input your keywords for searching.
5. Click "**sure**", then search progress bar will appear in notice bar.
6. After the completion of the search, dialogue box will pop up to confirm whether it's necessary to show results.
7. Click "**sure**" to display search results.

9 Troubleshooting

1. The first time you start T9005, it takes rather a long time.

After T9005 system upgrades, it takes about 2-3 minutes to install preloaded application software when starting it at first time. It will be faster later when you start it.

2. Disability to connect with WIFI

- Check whether the wireless router is at work.
- Check whether your T9005 is near the wireless router, whether there are walls or other obstacles preventing you from wireless router.
- Check whether the user name and the password are correct.

3. You feel a little bit hot of your T9005.

If you operate many programs at the same time or the brightness of the screen is very high, it is normal to feel a little bit hot of your T9005 because of costing more electricity.

4. The system is abnormal.

Installing the 3rd party program may result in failure operation. Press the power key for about 7 seconds to force your T9005 to be powered off.

5. Disability of setting an Email and program login.

- Check whether the network is normally connected with Internet
- Check whether Email setting is appropriate.
- Check whether the time of T9005 system is the same as the local time

Annex 1 Specifications

Type	Content	Description
: **Basic parameters**	T9005 model	T9005
	CPU model	Allwinner A13 Cortex A8 + GPU 400MHz
	CPU frequency	1.2GHZ
	DDR-RAM	DDR3 512MB
	EMMC FLASH	8GB
	Operation system	Google Android 4.0
	Network insertion	Wi-Fi 802.11b/g/n
	USB interface	Micro USB OTG x 1

	Camera	0.3MP(front), 0.3MP(rear)
	Standard batteries	Built-in lithium polymer battery, 3.7V, 2800mAh
	Power adaptor	Input voltage at AC 110~240V 50/60Hz, 0.4A and output voltage at Output: DC5.0V/2.0A)
	SD card	Supporting 32G maximum
Product visual appearance	Visual pattern	Pad
	Body color	Black
	Master screen	7-inch TFT liquid crystal touch (Capacitive 5-touch) liquid crystal screen at the resolution of 800x480
	Product size	191*116*10mm
	Product weight	330g
Application programs	Video playing	Supporting AVI, RMVB, MKV, FLV and other formats
	Music playing	Built-in music player supporting playback in the MP3, WMA, WAV and other formats
	Games	Supporting a third party program
	Input method	Android input method
	Picture browsing	Supporting picture browsing in the formats of JPEG, BMP, PNG and GIF, etc
	OFFICE software	Supporting office (word, excel, Power point reading and editing), and supporting PDF browsing